IF YOU NEED TECHNICAL ASSISTANCE CALL: (714) 953-0675

CD-RW/DVD-ROM Combo Drive QUICK Install Guide

This guide is intended to help you install the hardware necessary so you can start using your drive. For more detailed information about the hardware please contact technical support at (714) 953-0675.

Package Contents

MAGICSPIN CD-RW/DVD COMBO DRIVE

QUICK INSTALL GUIDE

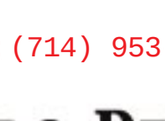

AUDIO CABLE W/SCREWS

DVD PlayBack Software

CD Recording Software

Verify the contents of your MagicSpin Drive. If any items are missing please contact customer service at (714) 953-0675.

Hardware Installation

¥JUMPER SETTING

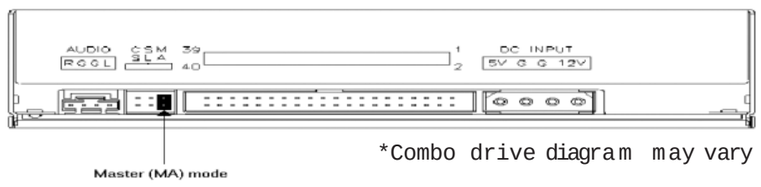

*Combo drive diagram may vary

Your MagicSpin drive, like all other electronic equipment is static sensitive. Please take the proper precautions when handling the drive. Avoid touching the IDE connector pins!

Before installing the drive into your system, make sure the jumper setting is set correctly.

¥Master Mode: If the Combo drive will be the only device connected to the IDE cable (gray ribbon), it should be set to Master (MA).
To set the drive as the Master drive, move the jumper to the MA position as shown above.

¥Slave Mode: If the Combo drive will be sharing the IDE cable with another device, one device should be set as Master and the other set as Slave (SL).
To set the drive as the Slave drive, move the jumper to the SL position.

¥Cable Select: Is an alternate method of determining master/slave settings. The CS setting is rarely used except by some computer manufacturers.
To utilize Cable Select (CS), move the jumper to the CS position.

Note: Cable Select (CS) mode is not needed unless the drive you are replacing is set to (CS) already. If you are unsure, please contact your computer manufacturer.

¥ATTACHING YOUR COMBO DRIVE TO YOUR COMPUTER

1. Turn off the PC. Remove the computer s cover. Please refer to your computer s User's Guide on how to remove the computer's cover.

2. Locate an empty 5 1/4-drive bay within your computer. Please refer to your computer's User's Guide for assistance. Slide the Combo drive into the empty bay.

3. Secure the drive with the appropriate screws.

4. Connect the IDE cable into the E-IDE to Interface connector on the back of your drive. Make sure to align the redlined edge of cable with Pin-1 of the IDE connector. Connect the audio cable if necessary. Again check your jumper setting s from the previous section (Hardware Installation).

5. Connect an available PC power supply cable to the back of the DC input connector.

6. Connect the IDE cable from your Combo drive to your motherboard s primary or secondary IDE port. If you have installed the audio cable to the drive, connect it now to your motherboard or sound card CD-IN connector.

7. Re-attach the computer s cover.

8. Reconnect all power cords to the computer, and turn your computer on.

9. Some users may have to adjust the BIOS Settings in the computer to detect your new IDE device. If you are unsure, please contact your computer manufacturer.

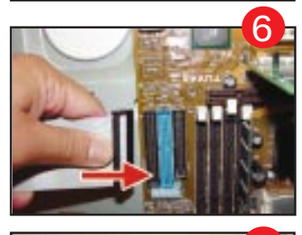

Power DVD Software Installation

PowerDVD is a high-quality, pure-software DVD (Digital Versatile Disc) player that brings movies and karaoke into your multimedia PC. Using PowerDVD, you can playback high resolution DVD titles or MPEG-2 files with superb MPEG-2 video and Dolby AC-3 audio quality. With these great advantages, PowerDVD is acknowledged as most suitable for home entertainment.

To Install PowerDVD

1. Insert the PowerDVD installation CD into your Combo drive.

2. The CD will automatically run and the installation program will guide you through the entire installation process.
   Note: if the installation program does not autoplay, run D:\Setup.exe where D:\ is the driver letter of your Combo drive

3. Enter the serial number when asked.
   (The Serial Number is located on the Power DVD CD sleeve).

4. Reboot your computer at the end of the installation.

PowerDVD Interface

PowerDVD presents you with a User Interface design as simple and friendly as your home VCR. Along with it s detailed yet clear design of the status display panel, it is very easy for users to comprehend and use each button.

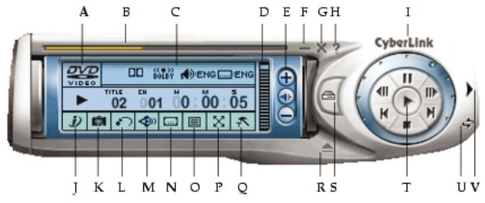

	Button/Icon	Description
A	Current Media Type	Displays the current media type
B	Navigational Slider	Visually displays elapsed time. Click along slider to jump to other locations
C	Display Area	Displays current settings such as audio coding, audio mode, language, and subtitles
D	Volume Level	Displays volume level
E	Volume Controls	Increase, mute or decrease volume
F	Minimize	Minimizes user interface to taskbar
G	Power Off	Exits PowerDVD
H	Help	Accesses online help
I	About	Displays information about PowerDVD
J	i-Power	i-Power takes you to the Internet directly
K	Capture Frame	Captures video content as bitmap image files
L	Go Up	Goes up to previous section when navigating DVD title menu selections
M	Audio Stream	Switches among available audio streams
N	Subtitles	Switches among available subtitles during playback
O	Menu	Accesses all available menus
P	Full Screen	Switches to full screen and back to windows mode
Q	Configuration	Configuration settings are all located here
R	Eject	Ejects discs from CD/DVD-ROM drive
S	Select Source	Selects media source for playback
T	Control Wheel	Refer to Control Wheel
U	Skin Toggle	Toggles between maximized and minimized skin
V	Menu/Number Pad	Activates/inactivates Menu/Number Pad